

Quick Start Manual - tempmate.®-C1 Temperature Data Logger

tempmate.®-C1 is a dry ice temperature logger. It automatically generates a PDF & CSV report. You can freely configure the parameters by using configuration software provided by our company on our website.

This manual describes the operation of the tempmate-C1 with factory settings (default setting).

DISPLAY



1 Recording Status	7 Temperature Unit, Time Unit
2 Mark	8 Max. value, Min. value, average value
3 Battery level	9 Alarm status
4 Alarm Level	10 Start delay
5 Password Protection	11 Reuse – can be used for several campaigns
6 Measurement Value	12 Stop Button Invalid

OPERATION

Configuration: The device has a default configuration. The recording interval is 10 minutes. The screen is disabled until recording begins.

Start by Start Button: Press  for at least 5 seconds until *bEGn* shows to start the logger. The logger starts recording.

View: In recording status, press  briefly, max. temperature value is displayed. Press  again, min. temperature value is displayed. Press  again, average temperature value is displayed. Briefly press this button again to return to recording status.

Stop: Press  for at least 5 seconds.

When the logger reaches the Max. working days or memory capacity is full, it will stop automatically. In stop status, briefly press any button, Max. Min. Avg. information will be displayed once in turn.

Final Report: After stopping the logger, connect it directly to the PC. The screen shows *PdF*, or *CSV*, indicating it is generating report. When the report is generated, *USB* is displayed. After removing it from the PC, press any button, Max. Min. Avg. information will be shown in turn.

NOTICE

-  If the screen displays *Set*, it means that the logger needs to be configured again.
-  If the screen displays  , it means that the logger doesn't have enough power to last 10 days. We advise you not to use it anymore.
-  If the screen displays *End* it means that the logger has run out of power. Please read and save the report and do not use the logger anymore.
-  If the screen shows the "Reuse" icon, it means that the logger can be used for several campaigns. You need to connect the logger to the PC and generate the report after the logger is stopped. If the report has not been generated, it is not possible to restart a logging campaign.

Please visit our website to find out more: c1.tempmate.com



Download tempbase-Cryo software to modify the default settings of the tempmate.®-C1
Download the full manual
Access all information about the tempmate.®-C1